


CMK-158T user manual/Руководство пользователя Модель CMK-158T

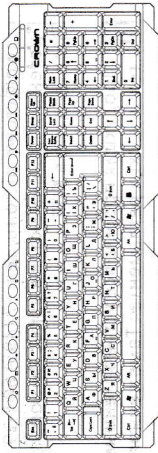

Specification:

Material: ABS;

Cable: 1.8m;

Size: 442*160*22mm;

Weight: 535g;

Working current: $\leq 200\text{mA}$;

Working voltage: 5V;

Support windows 98, 2000, XP, Vista, 7, 8, 10etc.

Features:

10 million times key stroke life;

High quality membrane with tactile key switch;

Special design, comfortable and strong strike feeling;

Streamlined and human engineering design, elegant and beautiful.

Environmental temperature

A. Operation: 5 °C to 50 °C

B. in storage: - 20 °C ~ 65 °C

Relative humidity

A. operation: 10% ~ 85% RH 25 °C

B. in storage: 5% ~ 95% RH 25 °C

Connection:

1. Insert USB-cable into a free computer/laptop USB-PORT.

2. There are no drivers needed. They are Windows built-in.

3. It takes several seconds for the operating system

to recognize the device (maximum 1 minute)

4. The device is ready.

Trouble shooting

If the device does not work, try to connect it to

another USB-port or computer

Make sure the device is compatible with the operating system

Клавиатура:

Материал : ABS пластик;

Длина клавиш: 1.8м;

Размер: 442(Д) x160(Ш) x22(В)мм;

Вес изделия: 535 г

Рабочий ток: $\leq 200\text{mA}$;

Рабочее напряжение: 5V;

Поддерживаемые ОС Windows 2000/XP/VISTA/7/8/10 и т.д.

Особенности:

Срок службы: 10 миллионов циклов.

Высококачественная мембрана клавиш для хорошего тактильного ощущения.

Специальная конструкция, удобная и ударопрочная.

Красивый, элегантный, эргономичный дизайн, обтекаемая форма.

Температура окружающей среды

При эксплуатации: от 5 до 50°C

При хранении: - 20 от 65°C

Относительная влажность

При эксплуатации: 10 ~ 85% при 25°C

При хранении: 5 ~ 95% при 25°C

Подключение:

1. Вставьте USB-кабель в свободный USB-порт компьютера или ноутбука.

2. Установка драйверов не требуется, так как они встроены в систему windows.

3. Потребуется несколько секунд, чтобы операционная система распознала устройство (максимум 1 минута).

4. Устройство готово к работе.

Поиск и устранение неисправностей

Если устройство не работает, попробуйте подключить его к другому USB-порту или компьютеру.

Убедитесь, что устройство совместимо с операционной системой.